

SealQuest®


SQ PIPE REPAIR KIT

Easy emergency bandage for leaking pipe

- ✚ Fast and effective use
- ✚ No extra tool necessary for mixing
- ✚ Activated by water
- ✚ Ready for use within several seconds
- ✚ Cured within 30 minutes
- ✚ Heat resistant till 150°C
- ✚ Suitable for Rubber, Polyester, Metal, Fibreglas, Wood and Concrete
- ✚ Suitable till 25 bar
- ✚ Packed in aluminium packaging

SQ Pipe Repair Kit is used in emergency repairs and protection of pipes.

SQ Pipe Repair Kit belongs to the standard equipment of technical services of industry, civil, marine etc. etc.

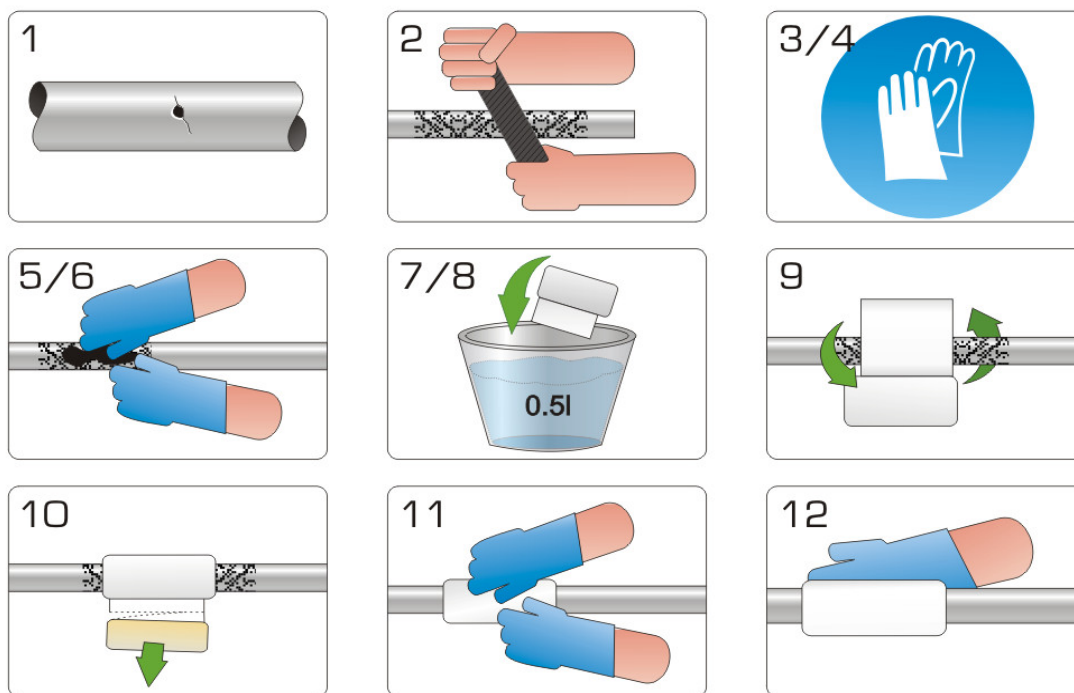

1. Clean the pipe
2. Bring on Steel Putty and let it rest for aprox 30 minutes (read the manual of the steel putty)
3. After 30 minutes when putty is brought on open the aluminium bag with repair tape
4. Add water in the bag or bucket
5. Squeeze light some water from the tape
6. Start with tightly winding the tape on the pipe
7. Wrap with 30 - 50% overlap
8. After 8-10 minutes it has been a strong structure
9. After 30-40 minutes ready for use and after 24 hours it's totally cured

Measurement table

| Nominal pipe diameter | Amount of rolls and size | | |
|-----------------------|------------------------------------|-----------------------------------|------------------------------------|
| | 3,5 bar (10 layers of wrapping) | 10 bar (15 layers of wrapping) | 25 bar (20+ layers of wrapping) |
| mm | (cm x cm) | | |
| 12,5 | 1 (5,0 x 100) | 1 (5,0 x 100) | 1 (5,0 x 100) |
| 19 | 1 (5,0 x 100) | 1 (5,0 x 100) | 1 (5,0 x 100) |
| 25 | 1 (5,0 x 180) | 1 (5,0 x 180) | 1 (5,0 x 180) |
| 32 | 1 (5,0 x 180) | 1 (5,0 x 180) | 2 (5,0 x 180) |
| 38 | 1 (5,0 x 180) | 1 (5,0 x 180) | 2 (5,0 x 180) |
| 50 | 1 (7,5 x 270) | 1 (7,5 x 270) | 2 (7,5 x 270) |
| 63 | 1 (7,5 x 270) | 2 (7,5 x 270) | 2 (7,5 x 270) |
| 75 | 1 (7,5 x 270) | 2 (7,5 x 270) | 2 (7,5 x 270) |
| 88 | 2 (7,5 x 270) | 2 (7,5 x 270) | 3 (7,5 x 270) |
| 100 | 2 (7,5 x 270) | 2 (7,5 x 270) | 3 (7,5 x 270) |
| 125 | 2 (7,5 x 270) | 3 (7,5 x 270) | 3 (7,5 x 270) |
| 150 | 2 (7,5 x 270) | 3 (7,5 x 270) | 4 (7,5 x 270) |
| 200 | 3 (7,5 x 270) | 4 (7,5 x 270) | 5 (7,5 x 270) |
| 250 | 3 (10,0 x 360) | 4 (10,0 x 360) | 5 (10,0 x 360) |
| 300 | 3 (10,0 x 360) | 4 (10,0 x 360) | 6 (10,0 x 360) |
| 350 | 4 (10,0 x 360) | 5 (10,0 x 360) | 7 (10,0 x 360) |
| 400 | 4 (10,0 x 360) | 6 (10,0 x 360) | 8 (10,0 x 360) |
| 450 | 4 (10,0 x 3,60) | 7 (10,0 x 3,60) | 9(10,0 x 3,60) |
| 500 | 4 (15,0 x 460) | 6 (15,0 x 460) | 7 (15,0 x 460) |
| 550 | 4 (15,0 x 460) | 7 (15,0 x 460) | 8 (15,0 x 460) |

SQ Pipe Repair Kit consist the following:

- 5,0 x 100cm
- 5,0 x 180cm
- 7,5 x 270cm
- 10 x 360cm
- 15 x 460cm
- Steel Putty 114 gr.
- Latex gloves

Article number SQ Pipe Repair Kit: **15160PRK**

Article number loose tape

- 15160510 : 5,0 x 100cm
- 15160518 : 5,0 x 180cm
- 15160727 : 7,5 x 270cm
- 15161036 : 10 x 360cm
- 15161546 : 15 x 460cm
- 1516SP : Steel Putty 114 gr.